






# USER MANUAL

## INSTALLATION OF DAF LF ADBLUE EMULATOR

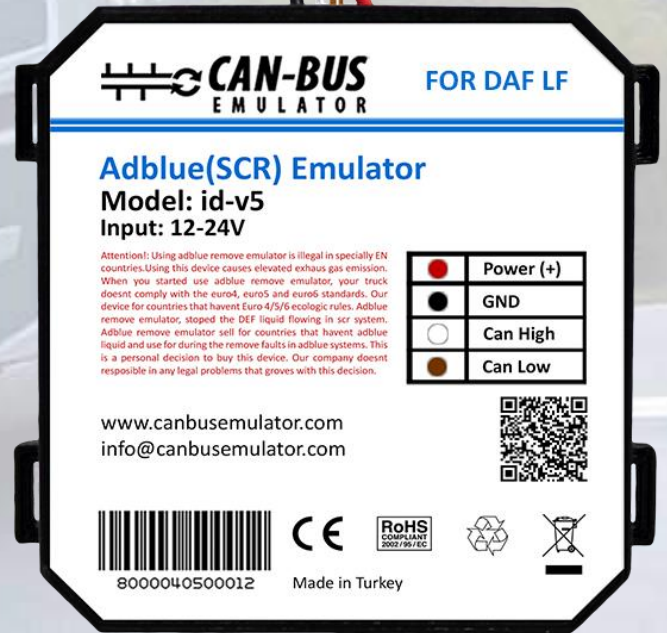


 [www.canbusemulator.com/en](http://www.canbusemulator.com/en)

 +90 530 937 46 36

 [erenakarsubasi](https://t.me/erenakarsubasi)

# INSTALLATION OF ADBLUE EMULATOR FOR DAF LF EURO 5

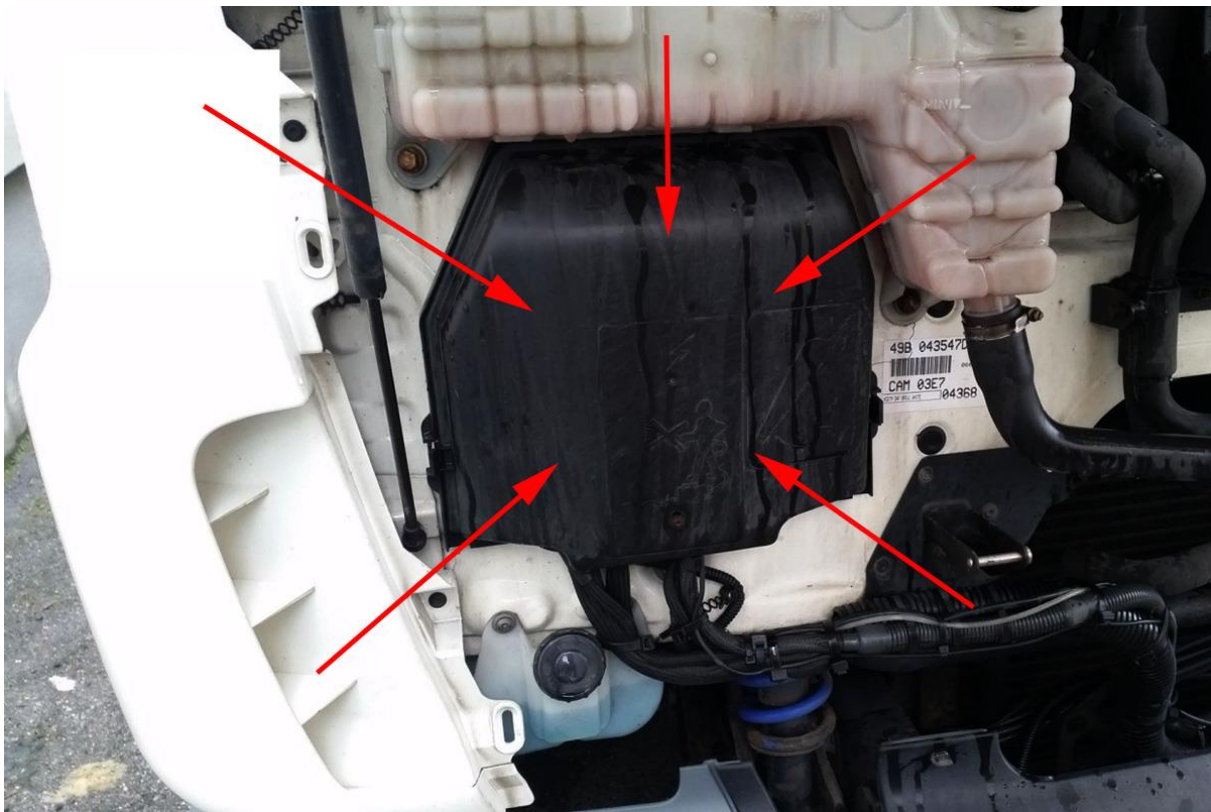


**Please locate the junction box under the hood of your DAF LF truck (same for EURO 4 / EURO 5 and EURO 5 EEV versions).**




**Locate this particular plug as shown and remove it (DAF LF EURO 4 / EURO 5 version).**



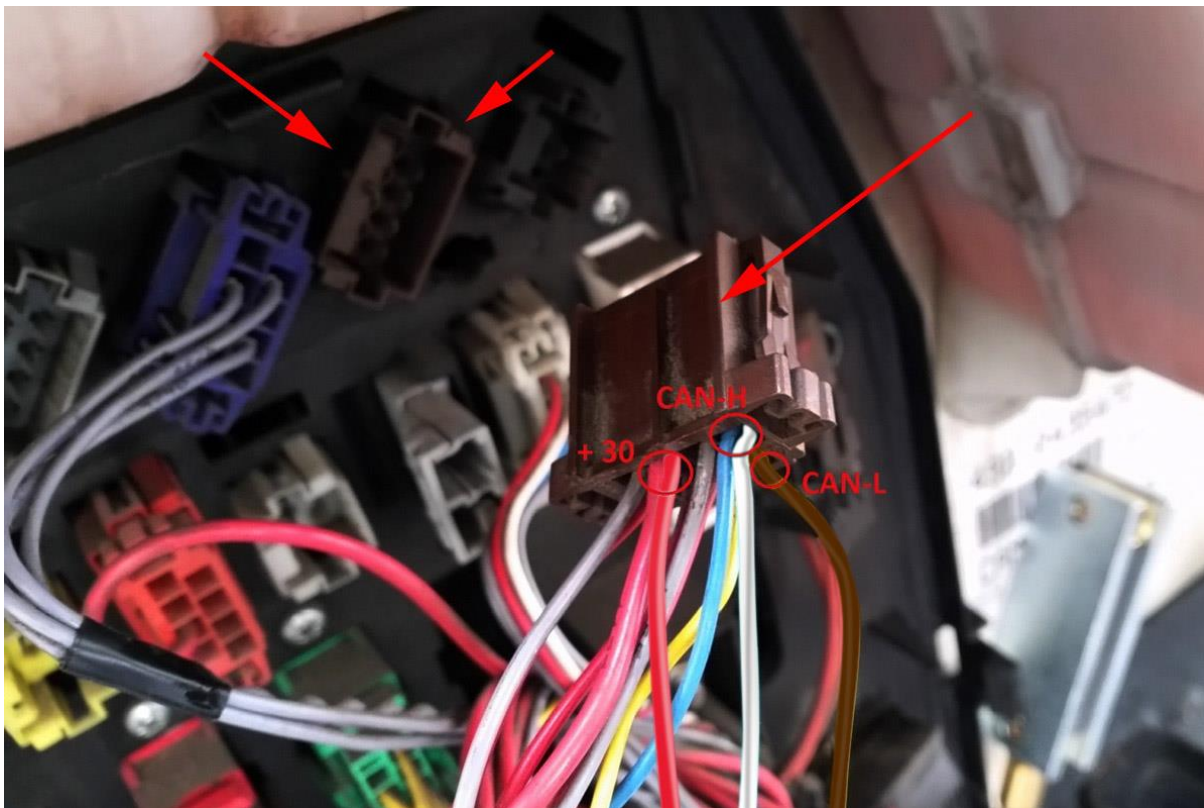

To connect AdBlue emulator we need to use these wires for CAN LOW, CAN HIGH and +30 connection (DAF LF EURO 4 / EURO 5 version).

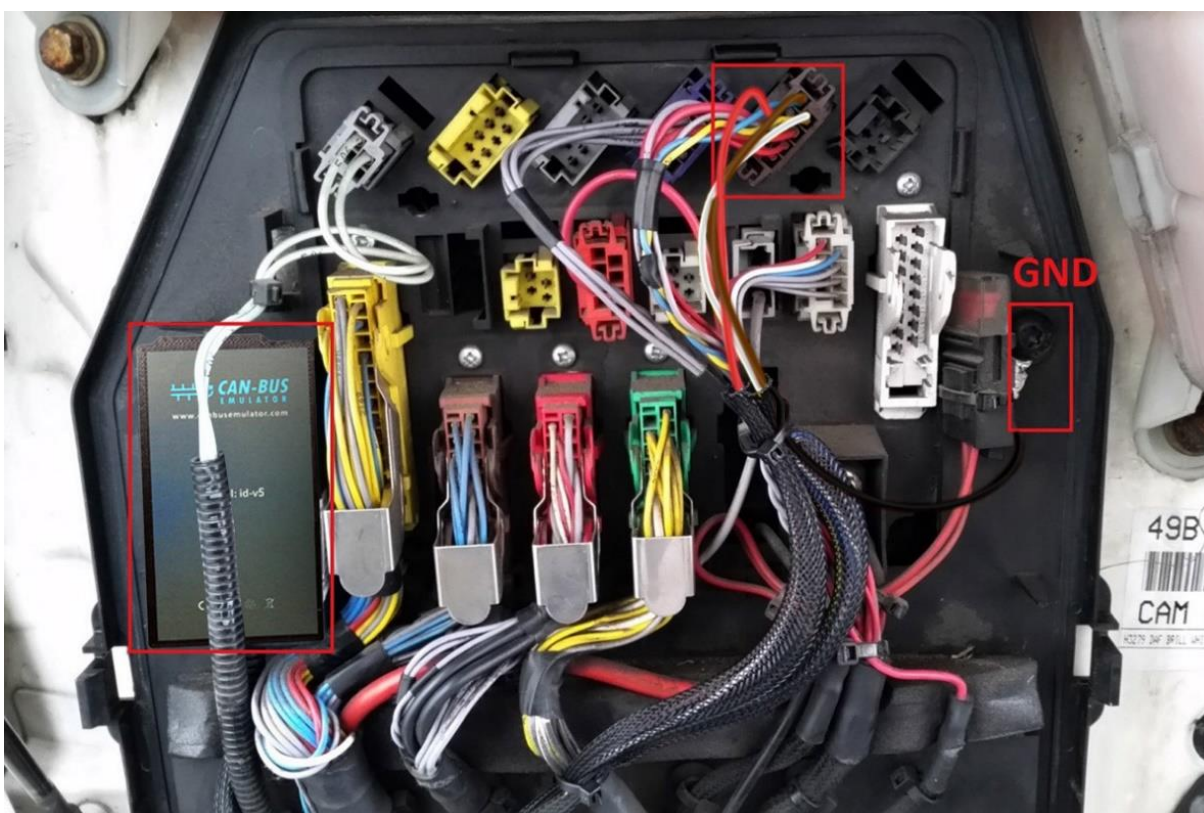


GND and other connections for AdBlue emulator (DAF LF EURO 4 / EURO 5 version).






Please remove these fuses from the fuse box  
(DAF LF EURO 4 / EURO 5 version).

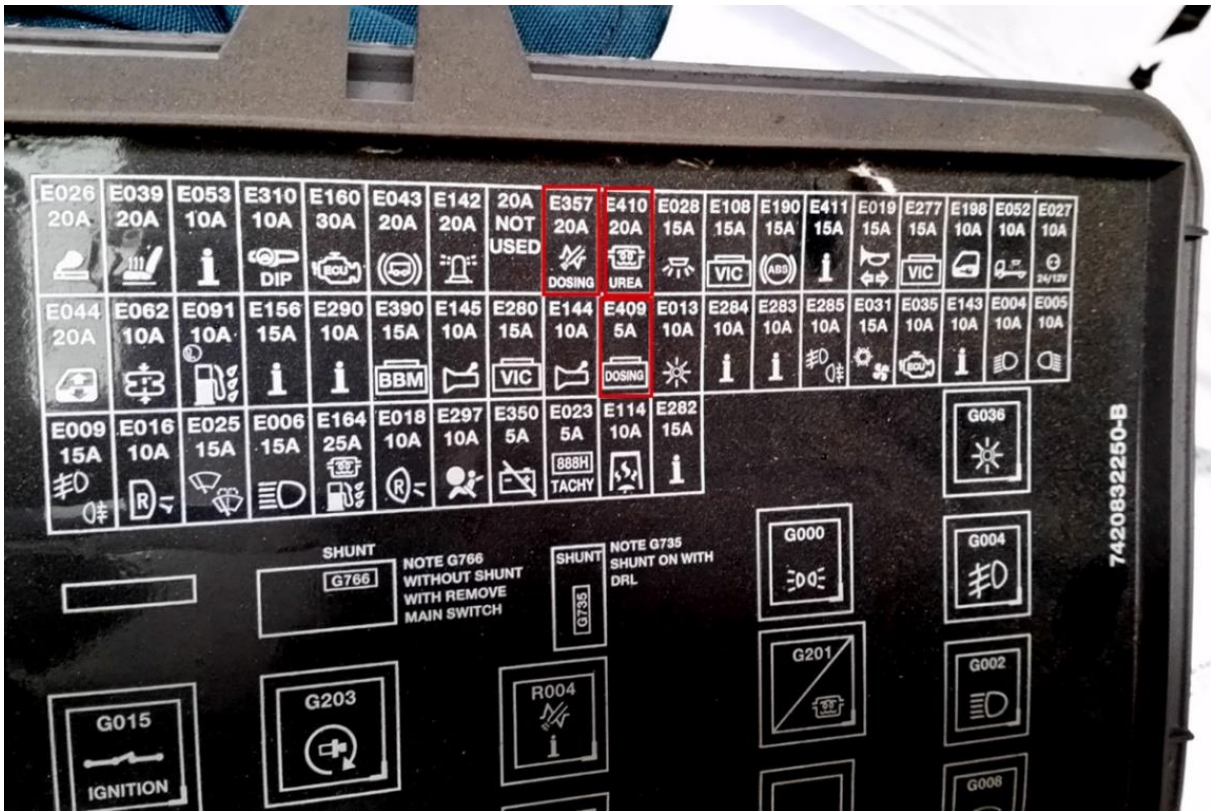


Check your fuse map to avoid any mistakes  
(DAF LF EURO 4 / EURO 5 version).



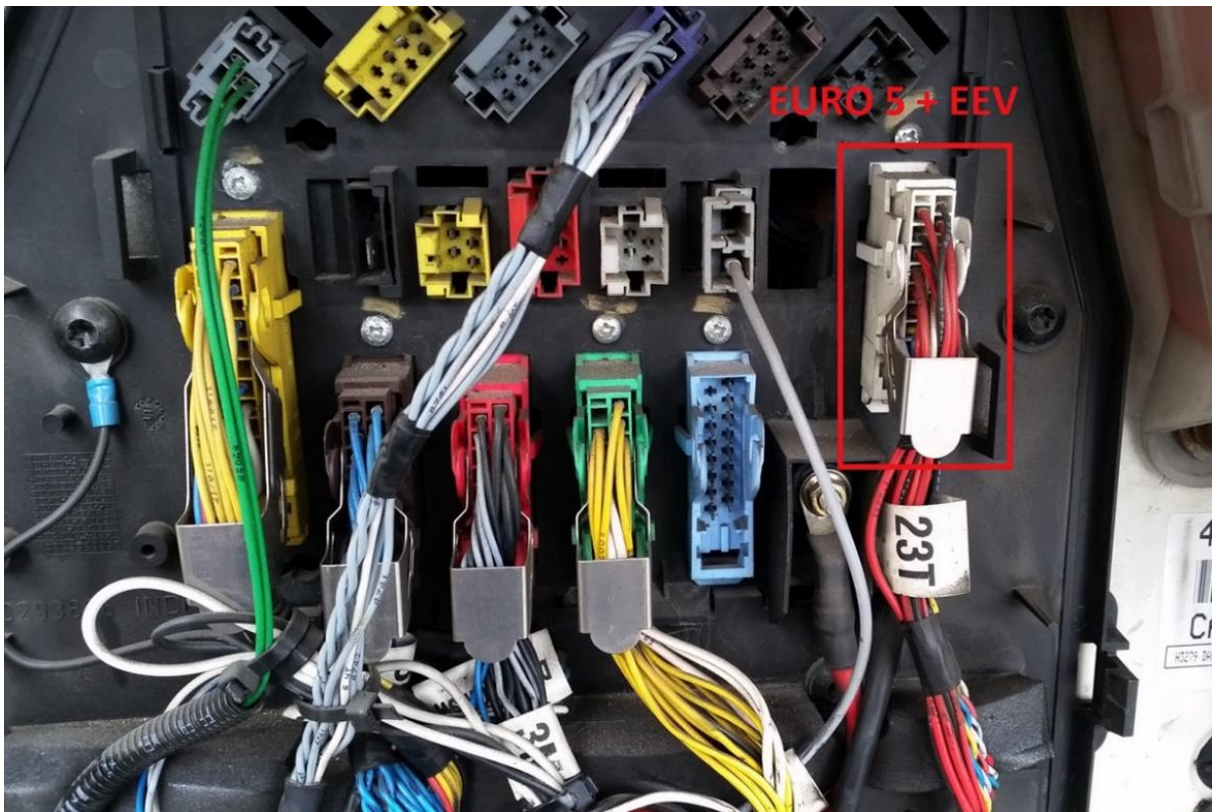

Locate this plug and use it to connect AdBlue emulator (DAF LF EURO 5 + EEV version).

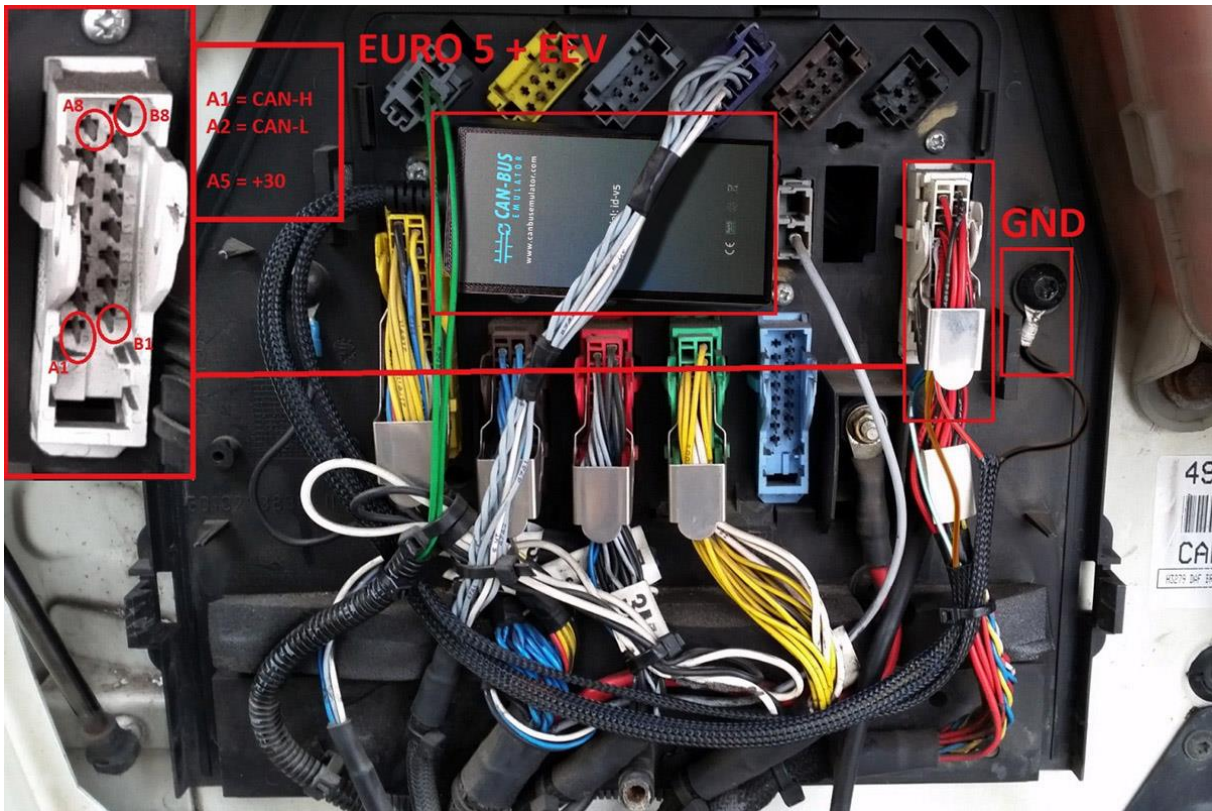

Connect AdBlue emulator CAN HIGH, CAN LOW and +30 wires to corresponding pins (DAF LF EURO 5 + EEV version).



