

USER MANUAL

ADBLUE EMULATOR TEMSA SAFİR

EURO 6



 www.canbusemulator.com/en

 +90 530 937 46 36

 [erenakarsubasi](https://t.me/erenakarsubasi)

Installation Emulator For DAF Euro 6

1. Contact and switch must be closed.
2. There is NOx sensor on the left side of the vehicle. assembly will be made from here CAN Lines.
3. The YELLOW cable of the emulator will be connected to the pink cable on pin3 of the NOx sensor (this cable is CAN HIGH).
4. The GREEN cable of the emulator will be connected to the YELLOW cable on pin2 of the NOx sensor (this cable is CAN LOW).
5. Emulator's BLACK cable will be connected to any chassis.
6. Emulator's RED cable will be connected to the ignition line (after contact line).
7. TEMSA SAFİR Vehicles fuse number 187 and 193 numbered will remove.

NOTE: After installation, in case of malfunction, you should delete the errors with the Fault detection device.

In the picture shown below are the parts simulating the system.



Installation Emulator For TEMSA SAFİR Euro 6

161	15A	SEPARATOR SENSOR BES. KL.30	SEPARATOR SENSOR PWR KL.30
162	20A	SEPARATOR ISITMA BES. KL.30	SEPARARTOR HEATING PWR. KL.30
163	15A	KLİMA RÖLE BESLEME KL.30	AIRCONDITION RELAY POWER KL.30
164	5A	BAGAJ SV BESLEMESİ	LUGGAGE SV POWER
165	15A	MOTOR ODASI SV BESLEME 1	ENGINE ROOM SV POWER 1
166	10A	FLAŞOR BESLEME	FLASHER POWER
167	3A	ALTERNATOR (S)	ALTERNATOR (S)
168	3A	ALTERNATOR (S)	ALTERNATOR (S)
169	5A	MOTOR KL.15	ENGINE KL.15
170	5A	TAKİMGRAF +30	TACHOMETER +30
171	20A	GOÇ RÖLESİ ÇIKIŞ	MAIN RELAY OUT
172	15A	GOÇ RÖLESİ ÇIKIŞ	MAIN RELAY OUT
173	5A	GOÇ RÖLESİ ÇIKIŞ	MAIN RELAY OUT
174	10A	YEDEK	SPARE
175	3A	BİR RÖLESİ BESLEMESİ	BIR RELAY POWER
176	15A	HAVA KURUTUCU BESLEME	AIR DRYER POWER
177	20A	ERS ECU BESLEME KL.30	ERS ECU POWER KL.30
178	15A	KAHVE MAKİNASI	COFFEE MACHINE
179	5A	UYKU KABİN AYDINLATMA	SLEEP CABIN LIGHTING
180	3A	ORTA KAPI SENSOR BESLEME	MIDDLE DOOR SENSOR PWR
181	10A	UYKU KABİN CONVECTR/FAN BESLEME	SLEEP CAB CONVECTR/FAN PWR
182	5A	UYKU KABİN PARK & SV	SLEEP CABIN PARK & SV
183	3A	ORTA KAPI YARD KİTRL(OPT)	MID. DOOR AUX SV(OPT)
184	15A	MUTFAK UNIT.RÖLE BESLEME(OPT)	KITCHEN RELAY POWER(OPT)
185	3A	TILT KL-15	TILT KL-15
186	15A	MOTOR ODASI SV BESLEME 2	ENGINE ROOM SV POWER 2
187	10A	EAS BESLEME	EAS POWER
188	15A	TRAFİK SİGORTASI BESLEME KL.30(OPT)	TRAFIC VARNING /SOOT FILTER PWR KL.30(OPT)
189	15A	ROMORK SOKET BESLEMESİ	TRAILER SOCKET POWER
190	10A	ABBLUE BESLEME KL.15	ABBLUE POWER KL.15
191	10A	ZF ECU BESLEME KL.15(OPT)	ZF ECU POWER KL.15(OPT)
192	15A	SEPARATOR BESLEME KL.15	SEPARATOR POWER
193	15A	EAS BESLEME	EAS POWER
194	15A	SEPARATOR BESLEME KL.15	SEPARATOR POWER
195	5A	ALTERNATOR BESLEME	ALTERNATOR POWER
196	10A	ROMORK SOKET BESLEMESİ	TRAILER SOCKET POWER
197	5A	ALARM DİREX BESLEME	ALARM PERMANENT POWER
198	10A	MOTOR KL-30	ENGINE KL-30
199	5A	MOTOR BESLEME	ENGINE POWER
200	10A	MOTOR BESLEME	ENGINE POWER