

# USER MANUAL


## ISUZU DPF EMULATOR INSTALLATION

**EURO 4**

**EURO 5**



 [www.canbusemulator.com](http://www.canbusemulator.com)

 +90 530 937 46 36

 [erenakarsubasi](#)

# ISUZU DPF EMULATOR INSTALLATION

## Isuzu DPF emulator connection

Emulator ----- Vehicle socket

Red ----- Ignition line

Black ----- OBD pin 4-5

Green ----- OBD pin 14

Yellow ----- OBD pin 6

Thin Green ----- temp 1 pin1

Thin Green ----- temp 1 pin2

Thin Yellow ----- temp 2 pin1

Thin Yellow ----- temp 2 pin2

White ----- DPF pressure pin2

You have to remove the temperature sockets and the DPF differential pressure socket. At the end of the process, you need to install an empty boiler/pipe with a suitable DPF filter. Otherwise, a physical blockage may occur.



**After installing the DPF Emulator, you need to remove the DPF.**


# OBD Socket



# Temp Sensor Socket



# DPF Pressure Socket

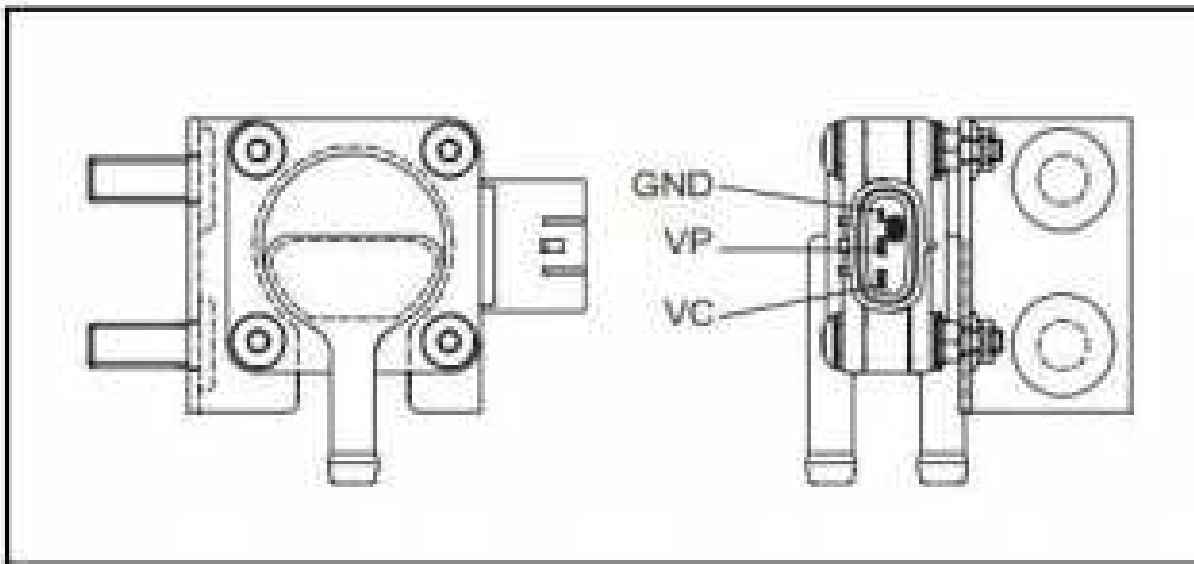

# DPF Filter

