



USER MANUAL

ADBLUE EMULATOR FORD

EURO 6



 www.canbusemulator.com/en

 +90 530 937 46 36

 [erenakarsubasi](https://t.me/erenakarsubasi)

Installation Emulator For FORD Euro 6


Required Instructions



First of all the vehicle should not be working. Then open the fuse box as shown above and remove fuse 33 and fuse 36 at the marked location. Then the black cable (GND) of the Adblue emulator is connected to the 4th pin from the back of the -OBD socket, the red wire (positive +) - 16. pin, white wire (CAN H) - 6. Pin and brown cable (CAN L) -14. Connect the pine. You can then run the vehicle.

The OBD socket is shown in the picture below.

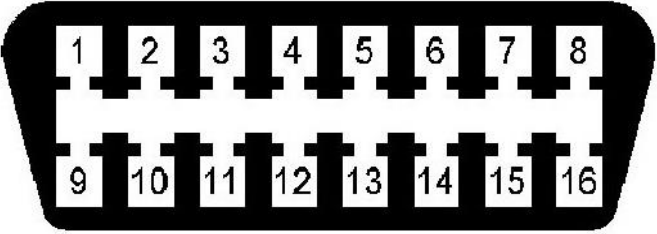

|  | | | | | | | | | | | | | | | |
|--|-------------|--|--|--|--|-----|-------------|--|--|--|--|--|--|--|--|
| PIN | DESCRIPTION | | | | | PIN | DESCRIPTION | | | | | | | | |
| 4 | Şase GND | | | | | 14 | CAN L | | | | | | | | |
| 5 | Sinyal GND | | | | | 16 | Pozitif(+) | | | | | | | | |
| 6 | CAN H | | | | | | | | | | | | | | |

NOTE: If the Emulator does not work in this connection, the emulator must be connected to the GND cable to the 5th pin.

You should definitely cancel the DPF after installing the Adblue Removal Emulator.