

USER MANUAL


AKIA ADBLUE EMULATOR INSTALLATION



- www.canbusemulator.com
- +90 530 937 46 36
- s erenakarsubasi

AKIA ADBLUE EMULATOR INSTALLATION



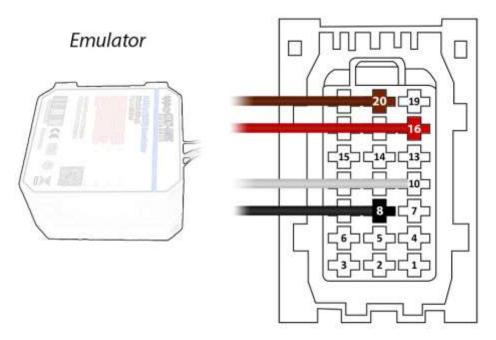

Brown (Emulator side) > Pin20 on the socket side Red (Emulator side) > Pin16 on the socket side White (Emulator side) > Pin10 on the socket side Black (Emulator side) > Pin8 on the socket side

After the process, the socket should be left unplugged or, alternatively, the emulator can be connected to the vehicle side by cutting Pin16 and attaching the Red cable.

You should definitely cancel the DPF after installing the Adblue Removal Emulator