



# USER MANUAL

Karsan Atak Adblue Emulator Installation



 [www.canbusemulator.com/en](http://www.canbusemulator.com/en)

 +90 530 939 55 10

 erenakarsubasi

# Karsan Atak Euro 6 Adblue Emulator Installation

Emulator	SOCKET
YELLOW	Nox Pin 4
GREEN	Nox Pin 3
BLACK	CHASSIS
RED	CONTACT LINE
WHITE	POMP SOCKET PIN 3
BROWN	POMP SOCKET PIN 10

## Removed Sockets

- Upstream NOx Sensor Socket
- Downstream NOx Sensor Socket
- PM Sensor Socket
- NH3 Sensor Socket
- Adblue level-temp-quality Sensor Socket


**NOTE:** Pins 3 and 10 in the pump socket must be cut and the emulator related cables must be connected to the vehicle side.



Pm Sensor



Level Sensor

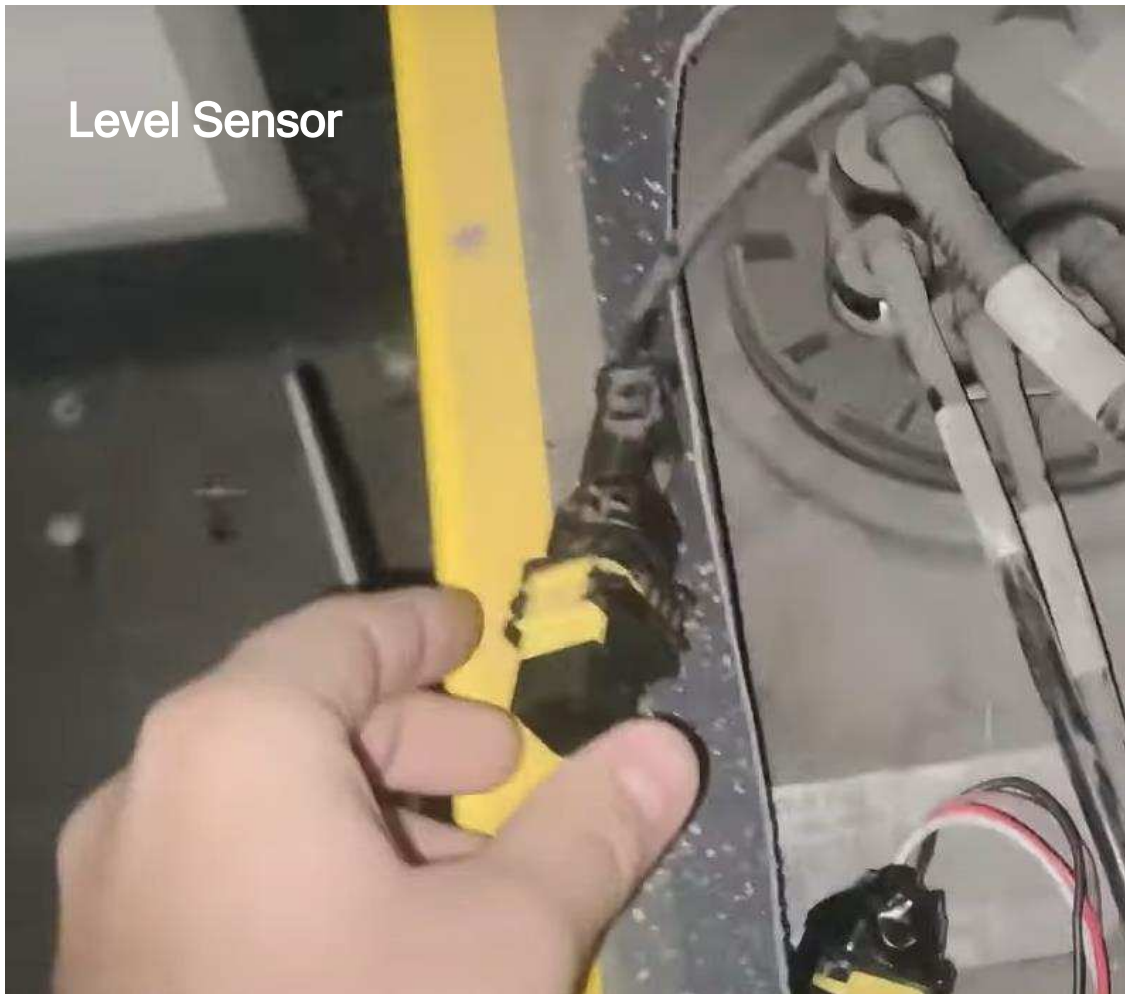





NH3 Sensor

[Click to Watch the Installation Video](https://www.youtube.com/watch?v=iuNXn8Wk-MQ)

<https://www.youtube.com/watch?v=iuNXn8Wk-MQ>