

USER MANUAL


FORD TRANSIT SID212 ADBLUE EMULATOR INSTALLATION

EURO 6





- **>** +90 530 937 46 36
- S erenakarsubasi

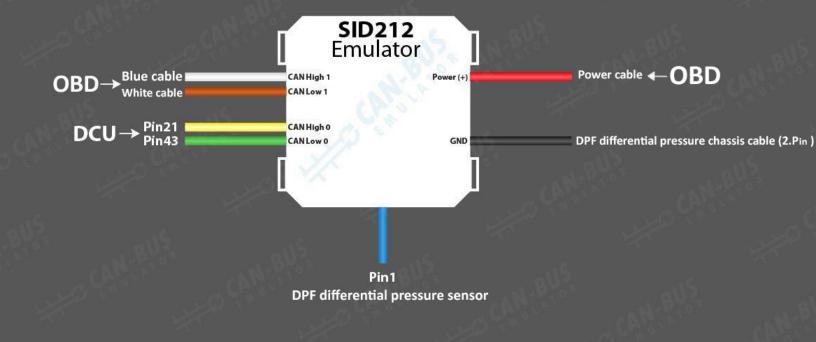

- Vehicle must be original.
 1- You need do regeneration for exhaust.
 2- You need reset function (SCR reset, DPF reset, learned Noxvaluereset,)
- 3- Emulator will be installed
- You don't need to cut the CAN line cables on the DCU, just pull the socket.
- Pull out the outlet NOx sensor.
- Pull out the DPF differential pressure sensor.
- Also, you need to connect the DPF differential pressure sensor ground cable with the emulator ground cable.



NOx Socket



DCU Socket



DPF Differential Pressure Sensor Socket



OBD Socket